




**FREEDOM WM VAN ADAPTOR BRACKETS**

**KIT NO: 019861-003**


**FIAT DUCATO, CITROEN JUMPER, PEUGEOT BOXER**

**Kits**


**PACKAGE CONTENTS:**

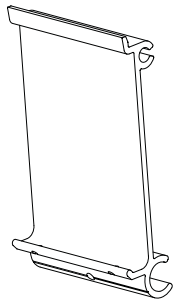

**A (x 2)**

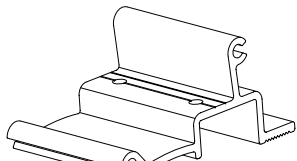


**B (x 2)**




**C (x 2)**



**D (x 2)**

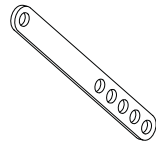

**E (x 4)**



**F (x 4)**

M6 x 90



**G (x 8)**

M6



**J (x 4)**

M6 x 30



**H (x 4)**

.25"x.75" OD



**K (x 2)**

#10 x 1/2"

BR003a

**INSTALLATION**

